


# NC 300 SERIES DUMP TRAILER PRE 2007 DOOR HANDLE RETROFIT

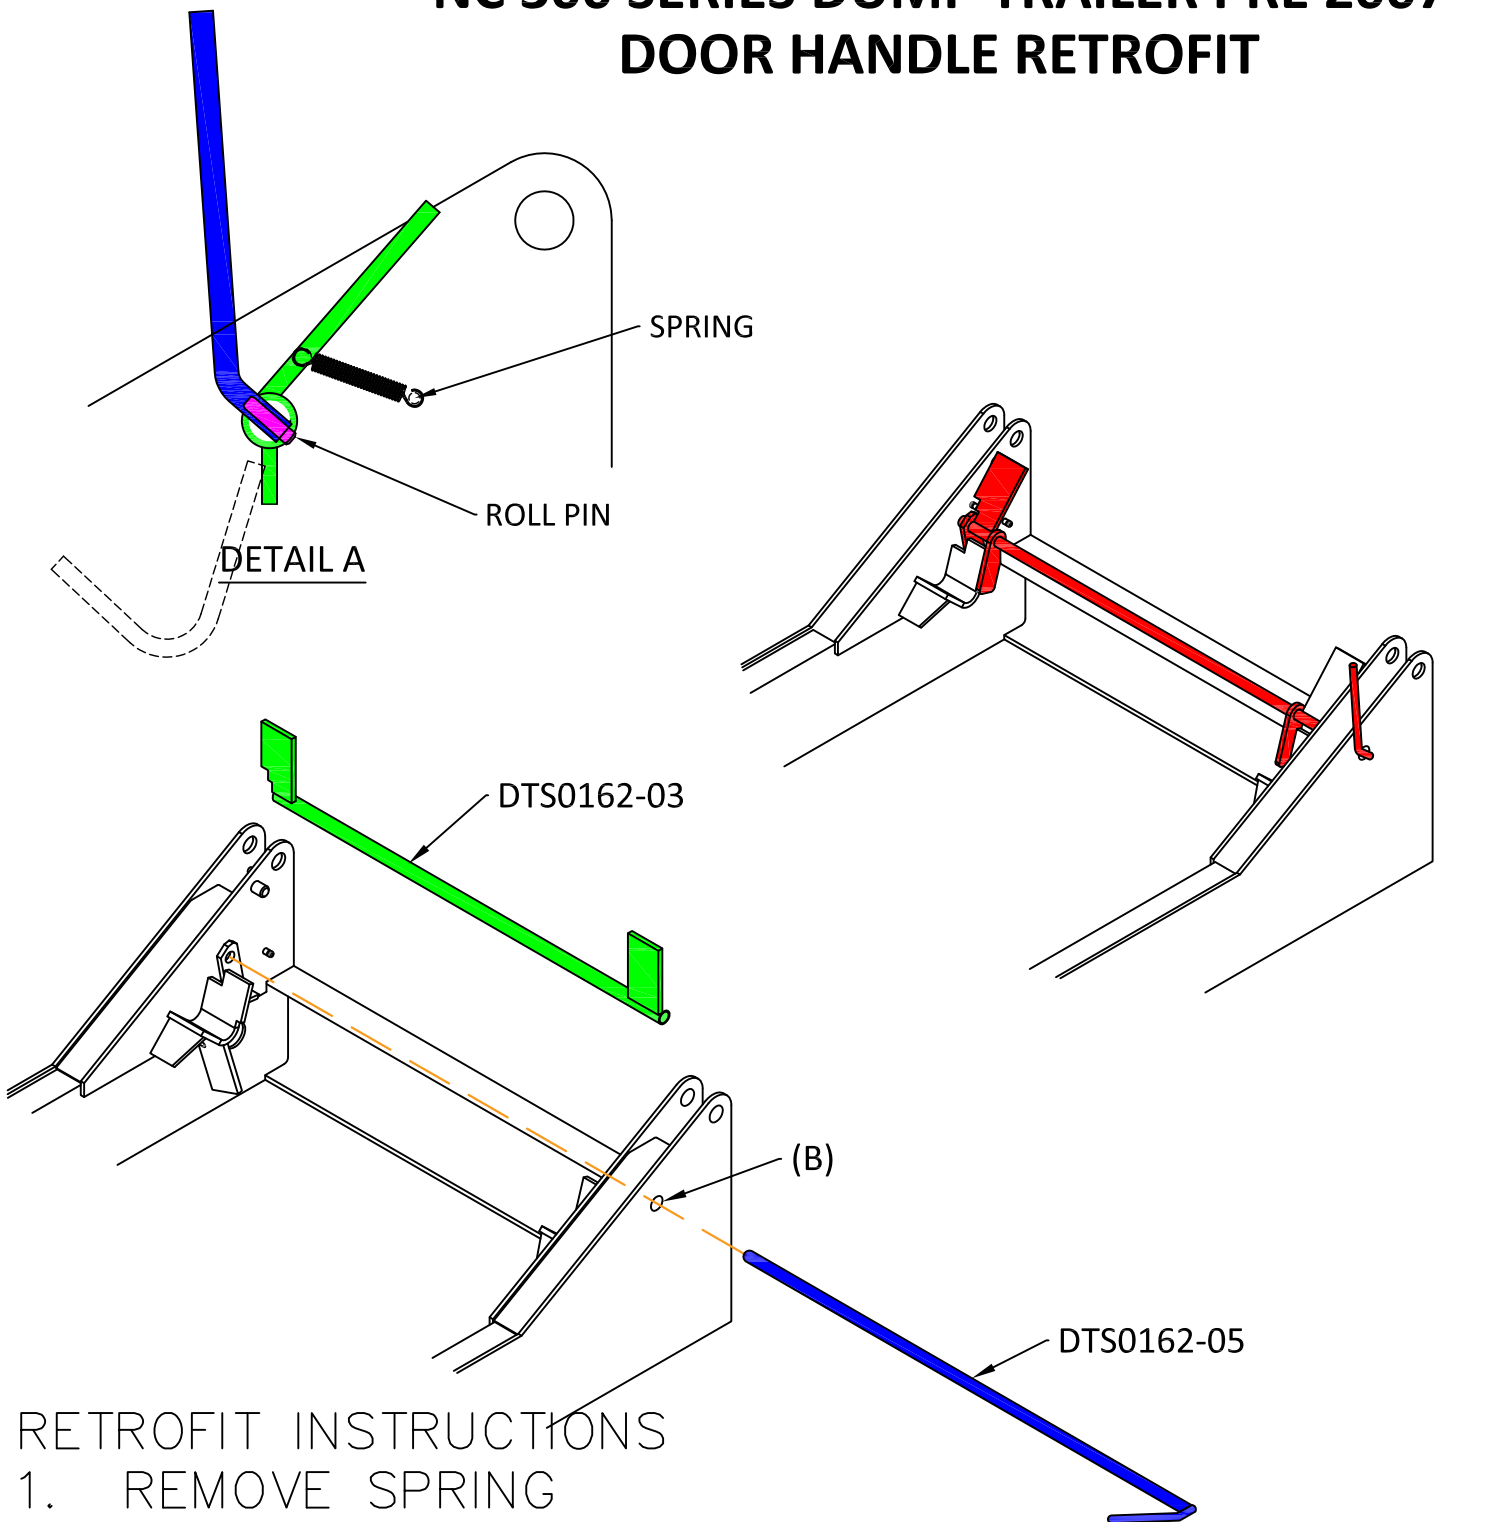

## RETROFIT INSTRUCTIONS

1. REMOVE SPRING
2. CUT AND REMOVE EXISTING ASSEMBLY SHOWN IN RED
3. ALIGN DTS0162-03 WITH DTS0162-05
4. SLIDE DTS0162-05 THROUGH HOLE (B) AND DTS0162-03
5. ROTATE DTS0162-03 AND DTS0162-05 UNTIL IT MATCHES DETAIL A
6. INSERT ROLL PINS TO SECURE BAR (SHOWN IN PINK)
7. REATTACH SPRING